

# STORMKING™

## Assembly Instructions

Please follow these instructions to guide you through assembly only. For complete instructions on the recommended care and use of your tent, please refer to Owner's Manual at [www.msrgear.com/tents/ownersmanual](http://www.msrgear.com/tents/ownersmanual).

### PACKAGE INCLUDES:

2 guy cords, 2 tensioners, 10 stakes, 1 repair sleeve




MOUNTAIN SAFETY RESEARCH®

© 2011 Cascade Designs, Inc.  
4000 First Avenue South  
Seattle, WA 98134 USA

1-800-531-9531 or 1-206-505-9500


## 1 PREPARE FOR SETUP

1. Spread tent out; stake out tightly.

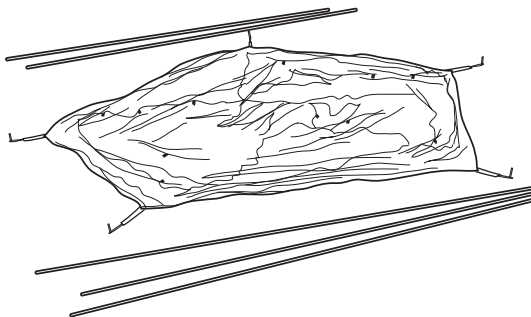


## 2 SETUP TENT

1. Insert pole tips of any orange pole into a grommet of the orange stake loops. Clip all orange coded clips to pole.
2. Insert pole tip of an orange pole into the grommet of the gray stake loop near front door and following green coded clips, insert the other end of pole into grommet of gray stake loop.

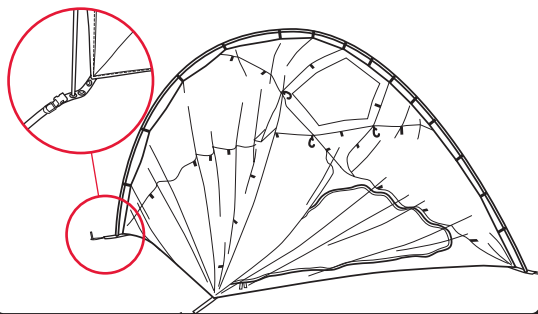


## 3 ATTACH CLIPS

1. Insert the 3 remaining poles into grommets of remaining stake loop. Follow color coded clips and insert the remaining end into grommet of stake loop. Connect large clips at intersections.
2. Put tripod on top of tent; insert tips of tripod into grommets at top of tent.

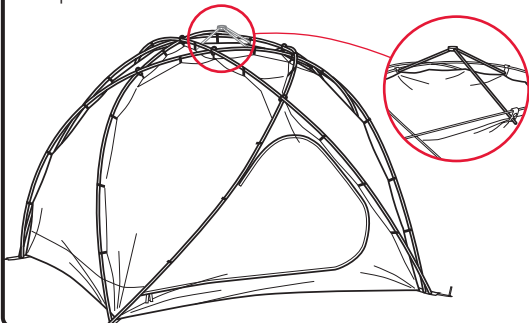

## 4 ATTACH RAINFLY

1. Thread silver vestibule pole into sleeve on underside of rainfly.
2. Lay rainfly over tent; make sure two doors on rainfly align with two doors on tent.
3. Insert vestibule pole tips into remaining grommets on either side of tent body door; clip and tighten buckles at all stake loops.

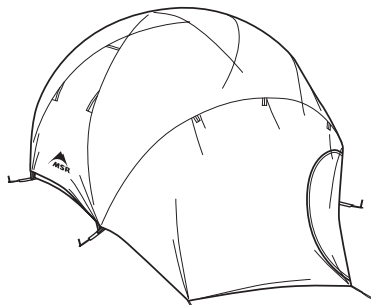

**Note:** All tents require staking. Unstaked tents are susceptible to blowing away. In some conditions, additional stakes and cord will be necessary. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. Footprints help to keep your tent clean, dry, and protected from abrasion. Following these tips will prolong the life of your tent.